

# Scanning **Film** using Epson Scan V850 Pro Scanner

Medium Format, 4"x5", and 35mm Film

#### **Table of Contents**


I. Equipment	2
II. Getting Started	2
III. Start Scanning	3
IV. Scan in Full Auto Mode:	5
V. Scan in Home Mode:	6
VI. Scan in Professional Mode	8
VII. Previewing and Scanning in Home and Professional Mode	9



#### I. Equipment

This digitization project requires:

- **Epson Perfection V850 Pro Scanner** (already set up at Digitization on Demand station)
- Film holder medium format or 4"x5" (available to check out at CCC desk)

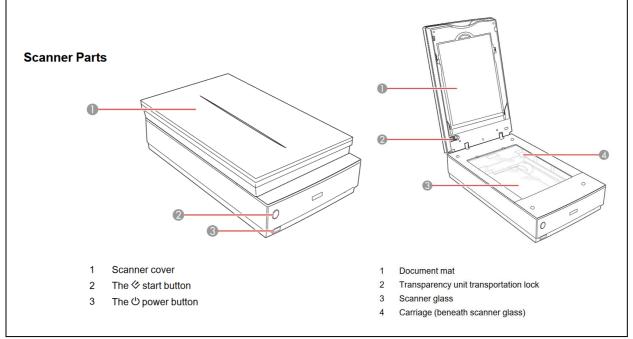

### **II. Getting Started**

Log in to the Digitization on Demand computer. You can log in with your library card or a guest pass.

ø	Press and hold the <b>power button</b> to turn on the scanner.
0	It is in the bottom left corner. A green light will come on.



	Double click on the <b>Epson</b> <b>Software icon</b> on the computer desktop. Select <b>Epson V800/V850</b> from the list that pops up.
EPSON Scan X EPSON Scan Full Auto Mode V	Choose a <b>Mode</b> from the list in the top right corner of the Epson Scan window.
Full Auto Mode Home Mode Professional Mode	You cannot use Full Auto Mode for Medium Format Film.


**Full Auto Mode (p.5):** The easiest way to scan. The program will automatically choose the best settings for your scan.


Home Mode (p.6): This mode offers more choice. You can select some settings such as scan, preview, and size options.

**Professional Mode (p.8):** This mode offers full control. You can choose all settings, previews, and size options for your scanned image.

#### **III. Start Scanning**

Open the scanner cover and **remove the white document mat** (on the inside cover) by pulling up on the handle.

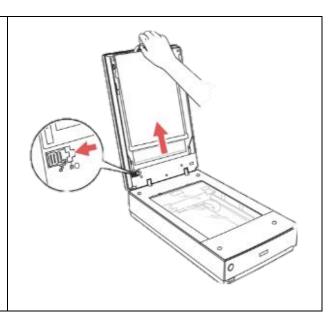

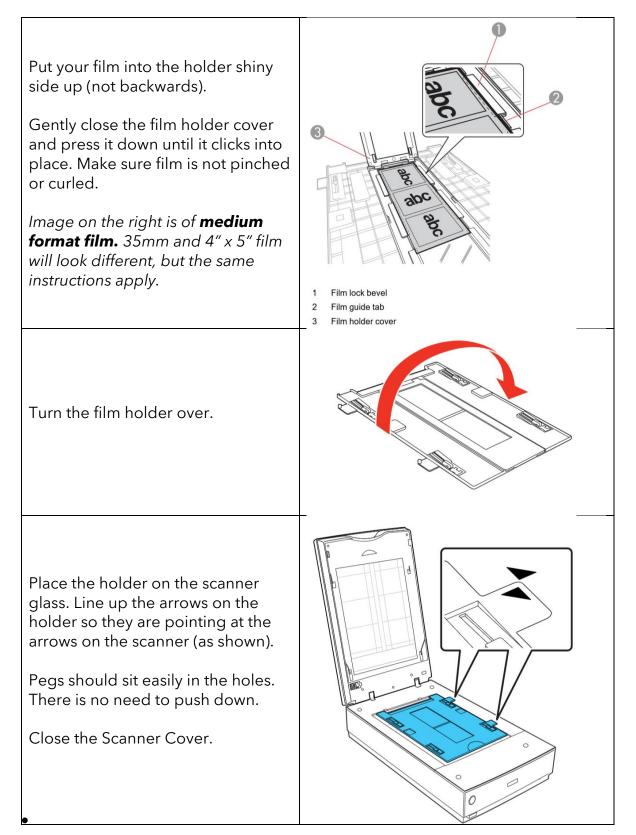




### IV. Scan in Full Auto Mode:

**This section only applies to 35mm and 4"x5" film.** You cannot scan medium format film in Full Auto Mode.

Scan       To scan in Full Auto Mode, position or load the material you want to scan, then click Scan.         Customize       For Color Restoration and other options, click the Customize button and then make the settings.         Show this dialog box before next scan.	<ul> <li>Optional: You can click Customize if you would like to decide:</li> <li>where a scan saves to on the computer (destination folder)</li> <li>the file format (.jpeg, .pdf, etc.)</li> <li>the scan quality (resolution).</li> </ul>	
Scan       To scan in Full Auto Mode, position or load the material you want to scan, then click Scan.         Customize       For Color Restoration and other options, click the Customize button and then make the settings.         Show this dialog box before next scan.	Click <b>Scan</b> .	
The according will externationly date at the	number of photon on the film in the	
The scanner will automatically detect the		
scanner and save each as an individual in	nage.	
When the scan is finished, the Epson scan window will automatically close and open the folder where your photos are saved on your computer.		
If you wish to scan more photos, you will need to relaunch the program.		
<b>NOTE</b> : If your final scanned images appear upside down, you can change this by opening your scanned photos in the Microsoft Photos Application and using		
the "Edit" feature. This will not wo	rk if you chose to save your scans as PDFs.	

### V. Scan in Home Mode:

**Home Mode:** This mode offers more choice. You can select some settings such as scan, preview, and size options.

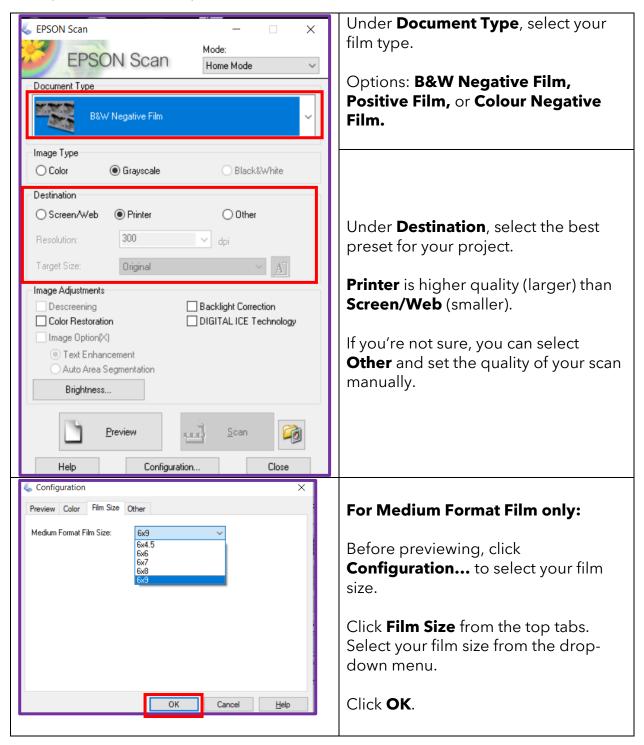



	Before you can scan, you must
Preview	<b>Preview</b> your film.
	A new window will open, showing you
	A new window will open, showing you
	a scan preview.

Jump to section **VII. Previewing and Scanning in Home and Professional Mode** for next steps.


#### VI. Scan in Professional Mode

**Professional Mode:** This mode offers full control. You can choose all settings, previews, and size options for your scanned image.

EPSON Scan - X Mode: Professional Mode V	
Name: Current Setting  Save Delete	Under <b>Original</b> , choose options that describe the film you are scanning.
Original         Document Type:       Film (with Film Holder)         Film Type:       B&W Negative Film	<ul> <li>Document Type: Choose Film (with Film Holder)</li> <li>Film Type: Choose from B&amp;W</li> </ul>
Destination       + Image Type:       Resolution:       300       dpi	Negative Film, Positive Film, or Colour Negative Film.
Document Size:     W     149.9     H     246.4     mm       + Target Size:     Original     Image: All states of the states	Under <b>Destination</b> , choose your Image Type and dpi (dots per inch).*
Adjustments	*See <b>Glossary</b> for description of options.
Dust Removal     DIGITAL ICE Technology	Before you can scan, you must <b>Preview</b> your photos.
Preview Scan	A new window will open, showing you a scan preview.

### VII. Previewing and Scanning in Home and Professional Mode

**Note:** Home Mode and Professional Mode look slightly different. Professional Mode has more options and a slightly different layout. The below instructions generally apply to both modes.

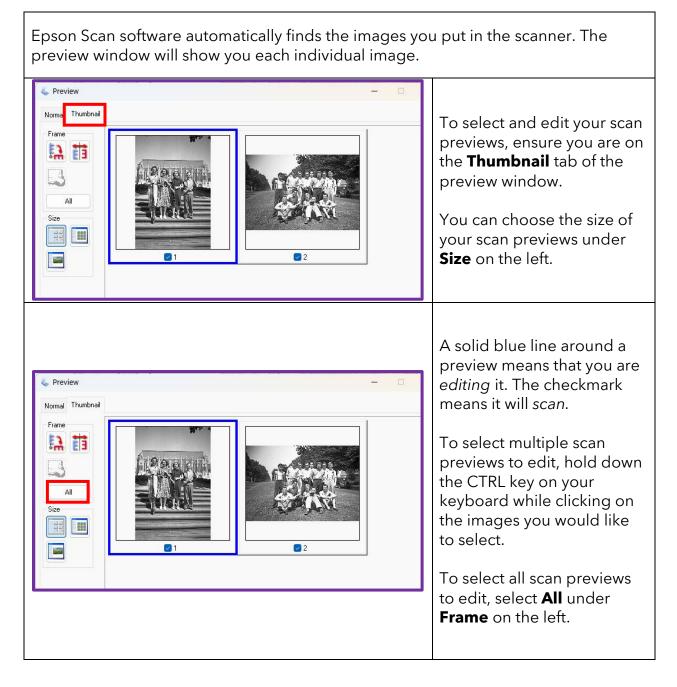



	To <b>Crop</b> your scan previews: Hold your mouse in the top left corner of your selected scan. A + sign will appear, and a dotted line will surround your scan. Use the double-pointed arrow to click, hold, and drag the dotted box to the desired size. Only the area included within the dotted line will appear in your finalized scan.
Frame	Under <b>Frame</b> , you can <b>Rotate</b> (90° clockwise) and <b>Flip</b> (mirror) your scan previews.
Destination O Screen/Web O Printer  O Other Resolution: 300  dpi Target Size: Original	In the original Epson Scan window, you can decide the target size and resolution for your final scans.
Image Adjustments         Original           Image Adjustments         Thumbnail (80 x 120)           Descreening         Screen (240 x 320)           Color Restoration         Screen (480 x 640)           Image Option(X)         Screen (758 x 1024)           0         Text Enhancer           Auto Area Seg         Letter (8 1/2 x 11 in.)           Ag(210 x 297 mm)           Brightness           8 x 10 in.	Any scan preview that is selected in the Preview Window will show the changes you make.
ID # 13 in           Pre         D3 8 (11 x 17 in.)           A3 (297 x 420 mm)         Customize           Help         Configuration	Image to the left is of Home Mode.



+ Target Size: 8 x 10 in.	
Adjustments         Image: Constraint of the second secon	During the selection process, you can also choose to make adjustments to the colour or quality of your scan.
+ DIGITAL ICE Technology	Image to the left is of Professional Mode.
Preview     Scan       Help     Configuration     Close	
<u> </u>	Ensure that all of the
2	preview scans you wish to finalize and save as full scans are <b>checked</b> (blue check box).
Breview     Scan       Help     Configuration	When you are ready to finalize your scans, click <b>Scan</b> .

δ File Save Settings Χ	The File Save Settings	
Location	window will pop up.	
O My Documents	Under Location shapes	
Pictures	Under Location, choose where you would like to	
O Other: Desktop Browse	save your scans.	
File Name (Prefix + 3-digit number)	To find a specific folder, click <b>Browse</b>	
Prefix: name_scan Start Number: 001 🖨		
Image Format	Under <b>File Name</b> , choose a	
Type: JPEG (*.jpg) V Options	prefix. If you are scanning multiple	
Details: Compression Level: [16] Encoding: Standard	photos,each scan will save	
Embed ICC Profile: ON	as that prefix with a number	
	following it (i.e. Prefix001,	
	Prefix002, Prefix003, etc.).	
Overwrite any files with the same name	Choose your <b>Digital Image</b>	
Show this dialog box before next scan	Format (i.e. JPEG, PNG,	
Open image folder after scanning	TIFF, etc.).	
Show Add Page dialog after scanning.	Click <b>OK</b> .	
OK Cancel Help	Click OK.	
When the scan is finished, close the Preview Window.		
You will find your final scans in <b>File Explorer —</b> in th	e folder you chose in the step	
above.		
Copy the file(s) to your USB storage device or save to a cloud storage service.		
<b>Repeat or Finish:</b> If you would like to scan another batch, repeat the process. If you		
are finished, close the Epson Scan application.		